


iMediaChassis Series

iMediaChassis/20

iMediaChassis/6

iMediaChassis/3

Operation Manual

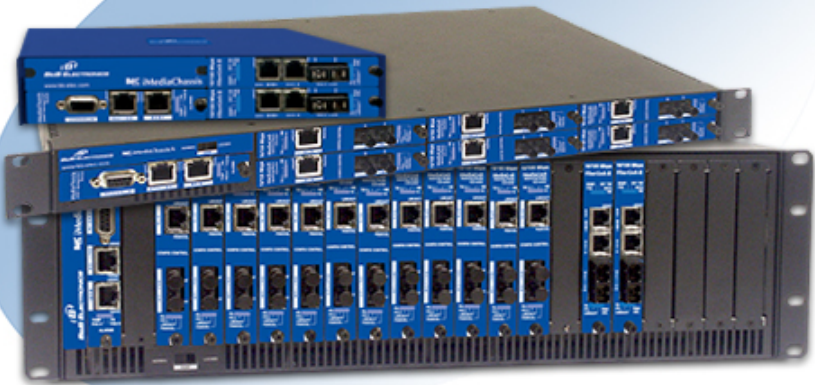

FCC Radio Frequency Interference Statement

Class A

This equipment has been tested and found to comply with the limits for a Class A computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

Class B

This equipment has been tested and found to comply with the limits for a Class B computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

Product Description	Version	FCC Class A	FCC Class B
iMediaChassis/20	Dual AC		✓
	Dual DC		✓
	ACDC		✓
iMediaChassis/6	AC	✓	
	Dual AC	✓	
	DC		✓
	Dual DC		✓
iMediaChassis/3	AC		✓
	2AC		✓
	DC		✓
	2DC		✓
	ACDC		✓

Limited Lifetime Warranty

Effective for products of B&B Electronics shipped on or after May 1, 2013, B&B Electronics warrants that each such product shall be free from defects in material and workmanship for its lifetime. This limited lifetime warranty is applicable solely to the original user and is not transferable. Power supplies are exempt from the limited lifetime warranty and are covered by a six year warranty.

This warranty is expressly conditioned upon proper storage, installation, connection, operation and maintenance of products in accordance with their written specifications.

Pursuant to the warranty, within the warranty period, B&B Electronics, at its option will:

1. Replace the product with a functional equivalent;
2. Repair the product; or
3. Provide a partial refund of purchase price based on a depreciated value.

Products of other manufacturers sold by B&B Electronics are not subject to any warranty or indemnity offered by B&B Electronics, but may be subject to the warranties of the other manufacturers.

Notwithstanding the foregoing, under no circumstances shall B&B Electronics have any warranty obligations or any other liability for: (i) any defects resulting from wear and tear, accident, improper use by the buyer or use by any third party except in accordance with the written instructions or advice of the B&B Electronics or the manufacturer of the products, including without limitation surge and overvoltage conditions that exceed specified ratings, (ii) any products which have been adjusted, modified or repaired by any party other than B&B Electronics or (iii) any descriptions, illustrations, figures as to performance, drawings and particulars of weights and dimensions contained in the B&B Electronics' catalogs, price lists, marketing materials or elsewhere since they are merely intended to represent a general idea of the products and do not form part of this price quote and do not constitute a warranty of any kind, whether express or implied, as to any of the B&B Electronics' products.

THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEMS IN ACCORDANCE WITH THE EXPRESS WARRANTY SET FORTH ABOVE IS B&B ELECTRONIC' SOLE OBLIGATION UNDER THIS WARRANTY. THE WARRANTY CONTAINED IN THIS SECTION SHALL EXTEND TO THE ORIGINAL USER ONLY, IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL SUCH WARRANTIES AND INDEMNITIES ARE EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION (I) THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY AND (II) ANY WARRANTY THAT THE PRODUCTS ARE DO NOT INFRINGE OR VIOLATE THE INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY. IN NO EVENT SHALL B&B ELECTRONICS BE LIABLE FOR LOSS OF BUSINESS, LOSS OF USE OR OF DATA INTERRUPTION OF BUSINESS, LOST PROFITS OR GOODWILL OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES. B&B ELECTRONIC SHALL DISREGARD AND NOT BE BOUND BY ANY REPRESENTATIONS, WARRANTIES OR INDEMNITIES MADE BY ANY OTHER PERSON, INCLUDING WITHOUT LIMITATION EMPLOYEES, DISTRIBUTORS, RESELLERS OR DEALERS OF B&B ELECTRONIC WHICH ARE INCONSISTENT WITH THE WARRANTY, SET FORTH ABOVE.

Table of Contents

- FCC Radio Frequency Interference Statement ii
 - Class A ii
 - Class B..... ii
- Limited Lifetime Warranty iv
- About the iMediaChassis/20..... 1
 - iMediaChassis/20 Features 1
 - Alarm Reset, Last Gasp and Temperature Gauge..... 1
 - Alarm Reset Button 2
 - Last Gasp Alarm..... 2
 - Temperature Gauge 2
 - SNMP Write Lock 2
 - SNMP Management Module LEDs..... 3
 - Installing the iMediaChassis/20 3
 - Wiring Instruction Guidelines for DC Module in 2DC and ACDC..... 4
 - DC Power Supply Module Wiring Instructions 5
 - Installing SNMP Management and Application Modules 5
 - Replacing Power Supply Modules 6
 - User-Replaceable Power Supply Modules 6
 - Dual DC, Part Number 850-10954-2DC 6
 - Dual AC, Part Number 850-10956-2AC..... 7
 - Dual AC, Part Number 850-10960-2AC..... 7
 - Dual DC, Part Number 850-10960-2DC 8
 - *Does not support redundancy..... 8
 - ACDC, Part Number 850-10960-ACDC..... 8
- iMediaChassis/20 Specifications..... 9
- About the iMediaChassis/6..... 12
 - iMediaChassis/6 Features 12
 - Alarm Reset, Last Gasp, and Temperature Gauge..... 12
 - Alarm Reset Button 12
 - Last Gasp Alarm..... 13
 - Temperature Gauge 13
 - SNMP Write Lock 13
 - SNMP Management Module LEDs..... 14
 - Installing the iMediaChassis 6..... 14
 - DC Power Wiring, Replacing Power Supply Modules and Fans..... 16
 - DC Power Supply Wiring Instructions..... 16
 - User-Replaceable Power Supply Modules 16
 - Fans 16
 - Installing Management and Application Modules..... 17
 - Installing Applications Modules..... 17
 - iMediaChassis/6 Specifications 18
- About the iMediaChassis/3..... 19
 - iMediaChassis/3 Features 19
 - Alarm Reset, Last Gasp, and Temperature Gauge..... 19

Alarm Reset Button 19
Last Gasp Alarm..... 19
Temperature Gauge 20
Installing the iMediaChassis/3 20
DC Power Wiring, Replacing Power Supply Modules and Fans..... 21
 DC Power Supply Module Wiring Instructions 21
 Power Supply Modules 22
 Fans 22
Installing Management and Application Modules 22
 Installing Applications Modules 22
 SNMP Write Lock 23
 SNMP Management Module LEDs 23
iMediaChassis/3 Specifications..... 25
Hardware Feature Matrix..... 25
B&B Electronics Technical Support 26
Electrostatic Discharge Precautions 27
Safety Certifications 28

About the iMediaChassis/20

The iMediaChassis series is a modular chassis platform designed for use with B&B Electronics' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/20 is a 3U high, Rackmountable chassis that features 20 slots for installing application series modules plus an additional slot for installing an SNMP Management Module. Power supply modules are user-replaceable and hot-swappable.

iMediaChassis/20 Features


The iMediaChassis/20 line offers models available in dual AC, dual DC and ACDC versions. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.



Alarm Reset, Last Gasp and Temperature Gauge

The iMediaChassis series supports power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair.

User-Replaceable Power Supply Modules

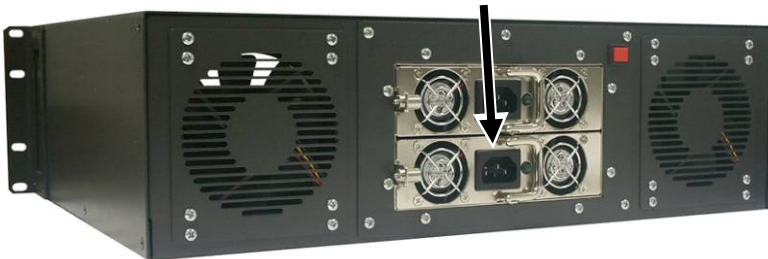

Alarm Reset Button

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power module. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply module itself also indicate power supply module failures.)

Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

Temperature Gauge

The iMediaChassis/20 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView²) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

SNMP Write Lock

There is an SNMP Write Lock switch located below slot #3 on the front of the iMediaChassis/20. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



NOTE
<i>Leave this switch in the NORMAL position during day-to-day operation; the LOCKED position should only be used when changing the SNMP management board.</i>


The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about configuration and operation. If an SNMP Management

Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:

- | | |
|----------------------|---|
| LNK/ACT | Glows green when a link is established on port. Blinks green when data activity occurs. |
| FDX/COL | Glows yellow when port is in Full-Duplex mode. Blinks yellow when port is operating in Half-Duplex mode and collisions occur. |
| TEMP | Glows yellow when temperature of unit surpasses a user-defined level. |
| PS | Glows yellow when one module malfunctions. |
| FAN A / FAN B | Glows yellow when a fan malfunctions. |

 

Installing the iMediaChassis/20

Install the chassis first before installing any modules into an iMediaChassis. When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
2. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

To install 20 -slot Rackmount chassis:

1. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
2. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
3. Plug the chassis into a reliable, filtered power source.


4. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the B&B Electronics.
5. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
6. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
7. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
8. Reliable Grounding - Reliable grounding of Rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).
9. All AC and DC versions are intended for use in a Restricted Access Location (RAL).

Wiring Instruction Guidelines for DC Module in 2DC and ACDC

1. Connection of a suitable grounding conductor to the grounding terminal at each power supply module (a minimum 14AWG copper conductor should be suitable based on a 15A circuit breaker requirement).
2. Connection of suitable supply wiring to the plus and minus terminals at each power supply module (a minimum 14AWG copper conductors is considered suitable based on the 11A input maximum). The input terminal block at the power supply module is suitable for 22-14 AWG copper wire.
3. A suitable listed circuit breaker shall be provided in the building installation as the unit's disconnect device. The branch circuit rating (i.e. minimum 15A listed circuit breaker, etc.).

DC Power Supply Module Wiring Instructions

The following diagram shows the wiring configuration for a -48 VDC power supply module for the iMediaChassis/20-2DC and iMediaChassis/20-ACDC.

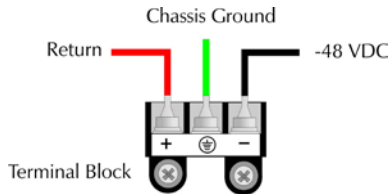

NOTE

The chassis is protected against incorrect wiring configurations. When wired incorrectly, the chassis will not function, but no damage will occur.

Installing SNMP Management and Application Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B&B Electronics recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

- Install the iMediaChassis/20 SNMP Management Module into the first slot of the chassis.

NOTE

This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules in this slot.

Replacing Power Supply Modules


User-Replaceable Power Supply Modules

While power supply modules are redundant *, failed power supply modules should promptly be replaced to maintain network integrity and prevent data loss.


To replace a power supply module:

1. Disconnect the power source from the power supply module.
2. Remove the screws of the retainer plate (on some AC modules).
3. Move the Power Supply Release switch toward the right or unscrew captive release screw.
4. Before grasping the power supply module by the silver handle, press the release screw and then slide out of the chassis (Power supply modules are hot-swappable).
5. Install new power supply module. If module is equipped with an ON/OFF switch install the module with the switch in the OFF position.

Dual DC, Part Number 850-10954-2DC

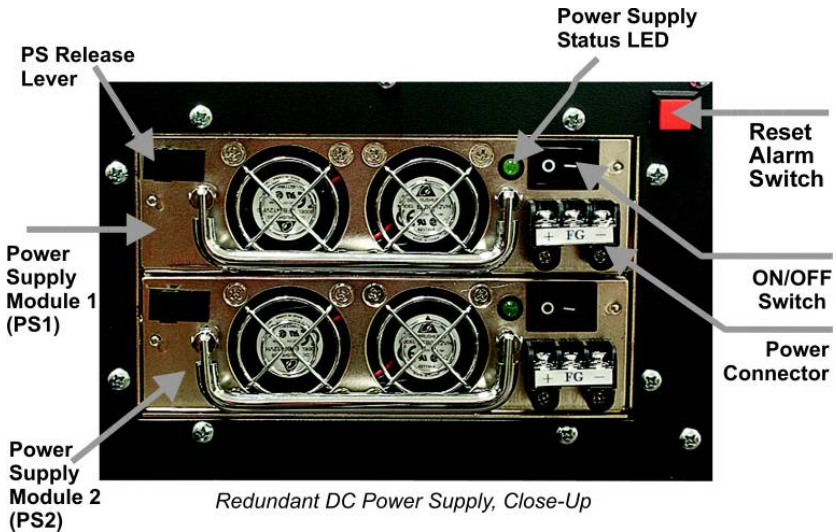


Dual AC, Part Number 850-10956-2AC

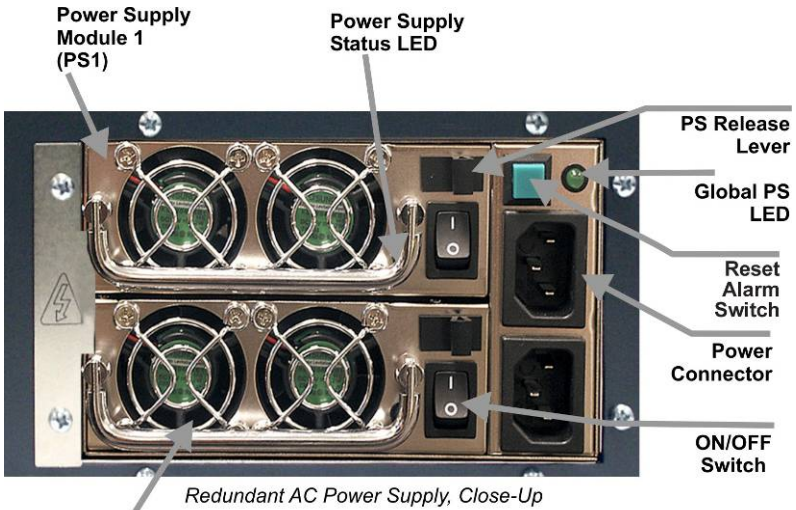


NOTE
<i>Do not mix AC and DC power supply modules.</i>

Dual AC, Part Number 850-10960-2AC

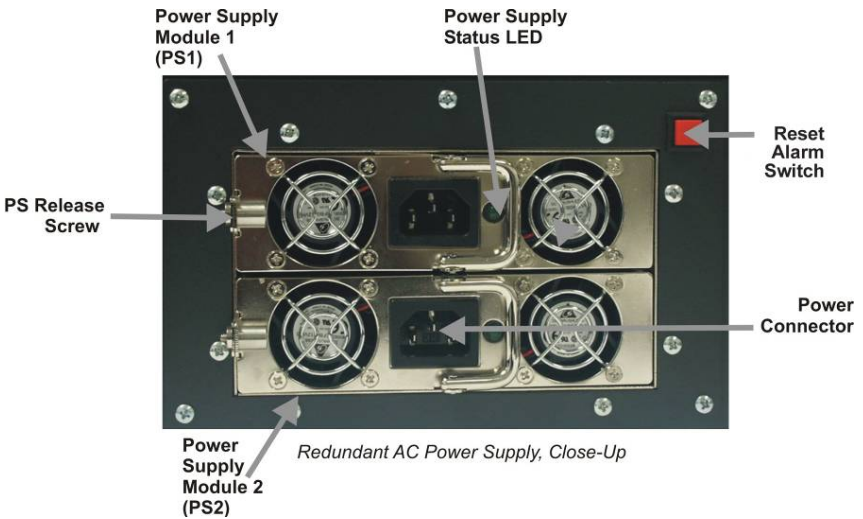


Dual DC, Part Number 850-10960-2DC

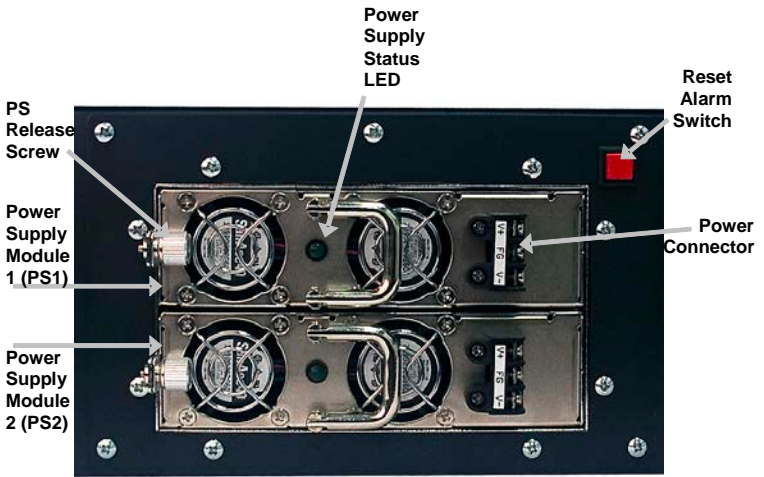

Redundant DC Power Supply, Close-Up

*Does not support redundancy.

ACDC, Part Number 850-10960-ACDC

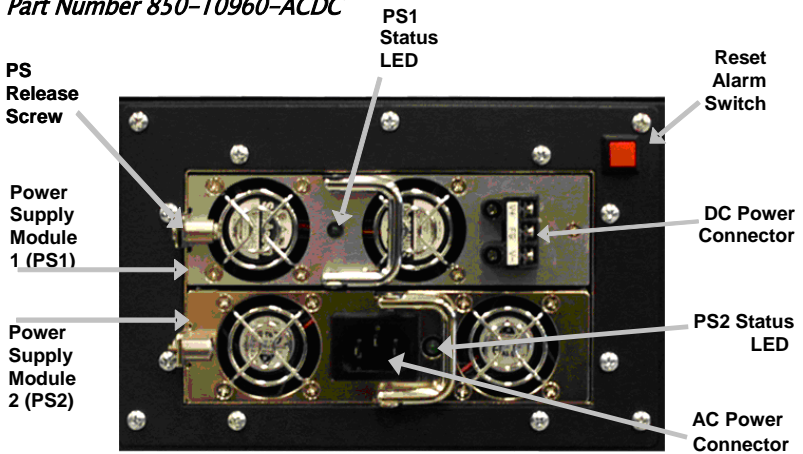

Redundant ACDC Power Supply, Close-Up

NOTE

For 850-10960-XX iMediaChassis/20, all models in that model number series can support Dual AC, Dual DC or ACDC. The power supply modules for that model number series are interchangeable.

iMediaChassis/20 Specifications

Input Specifications

Dual AC	100 to 240V AC, 50/60Hz, 3.5/1.5A
Dual DC	-48V DC, 5A
ACDC	100 to 240V AC, 50/60HZ, 2A -48V DC, 4.4A

Operating Temperature

0° C to 50° C (32° F to 122° F)

Storage Temperature

Dual AC & ACDC	-20° C to 80° C (-4° F to 176° F)
Dual DC	-20° C to 60° C (-4° F to 140° F)

Humidity

20 to 90% (non-condensing at 40° C)

Shipping Weight

25 lbs (11.3 kg)


Dimensions

5.2" x 19.0" x 13.8" (13.21cm x 48.26cm x 35.05cm)

Dual DC, Part Number 605-10144-2AC, 605-10145-2DC, 605-10146-ACDC

The Zippy Power supplies for the above chassis part numbers are the same size, so the fit into the power supply chassis-cage will accommodate all combinations of AC and DC power.

If your current chassis is an 850-10960 series, an upgrade kit with the Zippy power supply can be purchased directly from B&B Electronics. Please check for warranty coverage with B&B Electronics for the chassis; power supplies have a 6 year warranty.

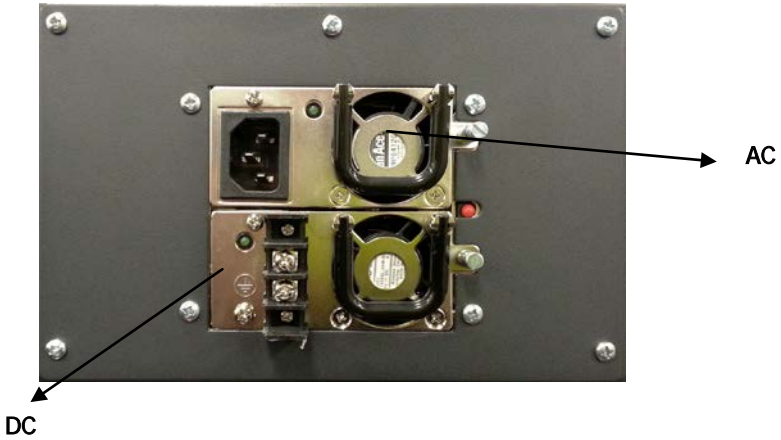

Input Specifications

Dual AC	100 to 240V AC, 50/60Hz, 3.5/1.5A
Dual DC	-48V DC, 5A
ACDC	100 to 240V AC, 50/60HZ, 2A -48V DC, 4.4A

Operating Temperature

0° C to 50° C (32° F to 122° F)

Storage Temperature

Dual AC & ACDC	-20° C to 80° C (-4° F to 176° F)
Dual DC	-20° C to 60° C (-4° F to 140° F)

Humidity

20 to 90% (non-condensing at 40° C)

Shipping Weight

25 lbs (11.3 kg)

Dimensions

5.2" x 19.0" x 13.8" (13.21cm x 48.26cm x 35.05cm)

About the iMediaChassis/6

The iMediaChassis series is a modular chassis platform designed for use with B&B Electronics' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/6 is 1U high, Rackmountable and supports optional redundant power supply modules, as well as an SNMP Management Module.

iMediaChassis/6 Features

The iMediaChassis/6 series offers a line of models including single AC, single DC, dual AC and dual DC. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.



Alarm Reset, Last Gasp, and Temperature Gauge

The iMediaChassis series supports modular power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair. Keeping fans functional ensures that the modules will operate within their temperature specifications.

Alarm Reset Button

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply module. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply itself also indicate power supply failures.)

After stopping the alarm, remove the power supply and replace the power supply module.

Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, “Remote Chassis Down”, which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

Temperature Gauge

The iMediaChassis/6 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis’ temperature rises above the specified level, the SNMP agent sends a trap (configured in iView²) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

SNMP Write Lock

There is an SNMP Write Lock switch located above the SNMP module slot on the front of the iMediaChassis/6. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



NOTE

*Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.*

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about configuration and operation. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:

LNK/ACT	Glows green when a link is established on port. Blinks green when data activity occurs.
FDX/COL	Glows yellow when port is in Full-Duplex mode. Blinks yellow when port is operating in Half-Duplex mode and collisions occur.
TEMP	Glows yellow when temperature of unit surpasses a user-defined level.
PS	Glows yellow when one power supply module malfunctions.
FAN A / FAN B	Glows yellow when a fan malfunctions.



Installing the iMediaChassis 6

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
2. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

To install a 6-slot Rackmount chassis:


1. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
2. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
3. Plug the chassis into a reliable, filtered power source.

4. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the B&B Electronics.
5. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
6. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
7. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
8. Reliable Grounding - Reliable grounding of Rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).
9. All AC and DC versions are intended for use in a Restricted Access Location (RAL).

DC Power Wiring, Replacing Power Supply Modules and Fans

DC Power Supply Wiring Instructions

The following diagram shows the wiring configurations for -48 VDC power supply modules for the iMediaChassis/6.

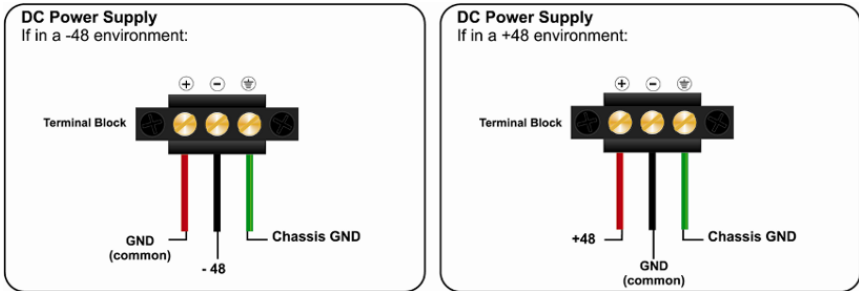

User-Replaceable Power Supply Modules

The iMediaChassis/6 ships from B&B Electronics with one or two power supply modules installed depending on the model. Chassis ordered with one power supply come with a filler tray installed in the second slot.

To install a second power supply:

1. Remove the filler tray.
2. Slide the power supply module into the chassis and click into place.
3. Attach power cord.

To remove a power supply module:

1. Disconnect the power source from the power supply.
2. Move the Power Supply Release switch toward the right and hold while grasping the power supply module by the silver handle.
3. Slide out of the chassis. (Power supply modules are hot-swappable.)
4. Install new power supply module.

Fans

Users can define a threshold for fan operation via SNMP (when installed in a managed environment). If a fan's speed falls below the specified level, SNMP sends a trap (configured in iView²) to the administrator. There are also two LED indicators on the SNMP Management Module for fan failure.

The red Alarm Reset Button also functions as a Fan Test button. To verify fan functionality, hold the button down for several seconds, the fans should engage. The fans will turn off when the button is released.

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB-9 serial port, and supports SNMP V1/V2c.

Installing Management and Application Modules

Installing Applications Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B&B Electronics recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

Install the iMediaChassis/6 slot into the first slot on the far left of the chassis.

NOTE

This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules into this slot.



iMediaChassis/6 Specifications

Input Specifications

AC	100 to 240V AC, 50/60Hz, 1A
DC	-48V DC, 2A

Operating Temperature:

AC	-25° C to 50° C (-130° F - 122° F)
DC	-40° C to 100° C (-40° F - 212° F)

Storage Temperature:

AC	-40° C to 85° C (-40° F - 185° F)
DC	-55° C to 125° C (-67° F - 257° F)

Humidity

5 - 95% (non-condensing); 0-10,000 ft. altitude

Shipping Weight

13 lbs (5.90 kg)

Dimensions

1.75" x 17.35" x 10.65" (4.45cm x 44.07cm x 27.05cm)

About the iMediaChassis/3

The iMediaChassis series is a modular chassis platform designed for use with B&B Electronics' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/3 is a 1U high, Rackmountable, capable of offering redundant power supply modules, and supports an SNMP Management Module.

iMediaChassis/3 Features

The iMediaChassis/3 series offers a line of models including single AC, single DC, dual AC, dual DC and ACDC version. All contain internal fixed power supply modules that are not end-user replaceable. It offers features such as redundant power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Button.



Alarm Reset, Last Gasp, and Temperature Gauge

The iMediaChassis/3 ships with one or two AC or DC power supply modules, depending on the model. Fans are included in all models.

Alarm Reset Button

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply. The alarm can be silenced by pressing the Alarm Reset Button, located next to the power connector on the power supply module. If this occurs the unit needs to be returned to IMC for repair.

Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

Temperature Gauge

The iMediaChassis/3 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView²) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

Installing the iMediaChassis/3

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Stay within the chassis' power rating to prevent overload of supply circuits or damage to any overcurrent protection and supply wiring.
2. Maintain reliable ground, especially when connecting to a power strip instead of directly to a branch circuit.
3. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
4. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

Use the iMcV-MediaChassis/3 as a table-top chassis, mount in a Rackmount shelf or mount it to a wall surface.

To install the 3-slot Rackmount in the chassis:

1. Install the iMcV-MediaChassis/3 by placing it on a flat surface.
2. Make sure to leave adequate space on the sides of the unit to accommodate cooling.
3. If mounting on a Rackmount shelf, align holes of the chassis to the shelf and secure with screws.

The Rackmount shelf is sold separately. To purchase the Rackmount shelf (part number 895-39949); visit the B&B Electronics' Product Accessories page.

Rackmounting requires a Rackmount shelf for mounting up to two units side by side.

4. Attach the cables between the chassis and the device that will be interconnected, and then plug the unit into a reliable, filtered power source.
5. If mounting the chassis on a wall, place two #10 panhead screws (not supplied) on the wall according to the distance of the holes on the chassis, and then hang the unit on the screws.
6. All versions are intended for use in a Restricted Access Location (RAL).
7. A readily accessible disconnect device shall be incorporated in the building installation wiring.
8. A suitable listed circuit breaker shall be provided in the building installation as the unit's disconnect device. The branch circuit rating (i.e. minimum 15A listed circuit breaker, etc.).


DC Power Wiring, Replacing Power Supply Modules and Fans

DC Power Supply Module Wiring Instructions

The following image shows the wiring configuration for a 48 VDC power supply in a negative ground system application. For positive ground system applications remove the chassis ground shorting jumper and connect it between the positive terminal and the chassis ground terminal. Alternatively, the chassis grounding jumper can be eliminated and the chassis ground connected at the power source. The ground terminal and the negative terminal are not connected inside the iMediaChassis/3.

DC Power Supply

Negative ground system configuration (default position)

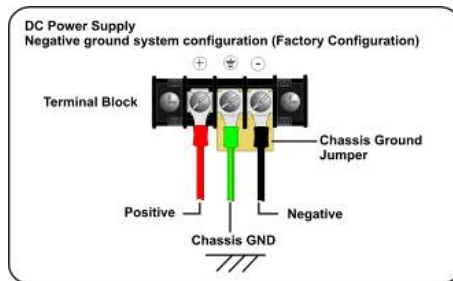

NOTE

Incorrect wiring will result in chassis malfunction.

The iMediaChassis/3 is compliant with Isolated Grounding Plane practices. The POSITIVE and NEGATIVE terminals are isolated from chassis ground and must have a ground reference at the power-sourcing equipment.

Power Supply Modules

Power supply modules in all models of the iMediaChassis/3 are fixed, and not end-user replaceable.

Fans

The iMediaChassis/3 includes temperature-triggered fans. When the temperature of the chassis reaches 45° C, the two fans activate to cool the chassis. The fans' operation can be tested by holding the Alarm Reset Button down for 4 to 5 seconds. The fans will activate and then they will turn off when the button is released. If the fans do not activate, contact B&B Electronics. Fans are not end-user replaceable.

The red Alarm Reset Button also functions as a Fan Test button. To verify fan functionality, hold the button down for several seconds, the fans should engage. The fans will turn off when the button is released.

Installing Management and Application Modules

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB-9 serial port, and supports SNMP V1/V2c.

Installing Applications Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. B&B Electronics recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

- Install the iMediaChassis/3 slot SNMP Management Module into the bottom left slot.

NOTE

 
This slot is ONLY for the Management Module; do not install Application

Modules such as media conversion and mode conversion modules in this slot.



SNMP Write Lock

The SNMP Write Lock switch is located on the back of the iMediaChassis/3. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.



NOTE


Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about how to configure and operate. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:

LNK/ACT	Glows green when a link is established on port. Blinks green when data activity occurs.
FDX/COL	Glows yellow when port is in Full-Duplex mode. Blinks yellow when port is operating in Half-Duplex mode and collisions occur.
TEMP	Glows yellow when temperature of unit surpasses a user-defined level.
PS	Glows yellow when one power supply module malfunctions.
FAN A / FAN B	Glows yellow when a fan malfunctions.

 

iMediaChassis/3 Specifications

Input Specifications

AC	100 to 240V AC, 50/60Hz, 0.75A
DC	35V DC to 75V DC Max, 1.6A

Operating Temperature

AC	0° C to 50° C (32° F to 122° F)
DC	-40° C to 50° C (-67° F to 122° F)

Storage Temperature

AC	-40° C to 85° C (-40° F to 185° F)
DC	-55° C to 125° C (-40° F to 212° F)

Humidity: 5 to 95% (non-condensing); 0 to 10,000 ft. altitude

Shipping Weight: 5 lbs (2.3 kg)

Dimensions: H=1.73" W=7.50" D=8.74" (4.4 x 19.0 x 22.0 cm)

Hardware Feature Matrix

Power Supply	iMediaChassis/3
Versions	AC, 2AC, DC, 2DC*, ACDC
Type	Fixed
End user replaceable	No
LEDs	Yes
Redundant upgrade on single slot chassis	No

*Trap can be set for exceeding a temperature value

B&B Electronics Technical Support

Tel: (800) 346-3119 (in the U.S. and Canada)

Monday-Friday, 7:00am-7:00pm CST

+353 91 792444 (Europe)

Monday through Friday 8:00am - 5:00pm GMT


Fax: (815) 433-5109 U.S. and Canada

+353 91-792445 Europe

E-Mail: support@bb-elec.com U.S. and Canada

techsupport@bb-elec.com Europe

Web: www.bb-elec.com

WARNING	
	Disconnect all power supplies before servicing.

Electrostatic Discharge Precautions

Electrostatic discharge (ESD) can cause damage to any product, add-in modules or stand alone units, containing electronic components. Always observe the following precautions when installing or handling these kinds of products

1. Do not remove unit from its protective packaging until ready to install.
2. Wear an ESD wrist grounding strap before handling any module or component. If the wrist strap is not available, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.
3. Hold the units by the edges; do not touch the electronic components or gold connectors.
4. After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the modules or stand alone units over any surface.



WARNING! Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

Safety Certifications

UL/CUL: Listed to Safety of Information Technology Equipment, including Electrical Business Equipment.

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility (2004/108/EC) and the Council Directive on Electrical Equipment Designed for use within Certain Voltage Limits (2006/95/EC). Certified to Safety of Information Technology Equipment, Including Electrical Business Equipment. For further details, contact B&B Electronics.



European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.





International Headquarters

B&B Electronics
707 Dayton Road
Ottawa, IL 61350 USA

Phone (815) 433-5100 — **General Fax** (815) 433-5105

Email: support@bb-elec.com

Website: www.bb-elec.com

European Headquarters

B&B Electronics
Westlink Commercial Park
Oranmore, Co. Galway, Ireland

Phone +353 91-792444 — **Fax** +353 91-792445

Email: techSupport@bb-elec.com

Website: www.bb-elec.com

**ISO 9001:2008
REGISTERED**



© 2013 B&B Electronics. All rights reserved.

The information in this document is subject to change without notice. B&B Electronics assumes no responsibility for any errors that may appear in this document. iMediaChassis Series is a trademark of B&B Electronics. Other brands or product names may be trademarks and are the property of their respective companies

.Document Number iMediaChassis series

March 2014